

### 5. DMX channel allocation:

DMX profile Mode A ( 4Channels)

DMX channel	Function	Description	Value
1	LED color	Red	0-255
2	LED color	Green	0-255
3	LED color	Blue	0-255
4	LED color	White	0-255

DMX profile Mode B ( 5Channels)

DMX channel	Function	Description	Value
1	LED color	Red	0-255
2	LED color	Green	0-255
3	LED color	Blue	0-255
4	LED color	White	0-255
5	Dimmer	Master Dimmer	0-255

DMX profile Mode C ( 7Channels)

DMX channel	Function	Description	Value
1	LED color	Red	0-255
2	LED color	Green	0-255
3	LED color	Blue	0-255
4	LED color	White	0-255
5	Strobe	No function	0-9
		Strobe slow to fast	10-57
		No function	58-59
		Pulse on to off/slow to fast	60-108
		No function	109-110
		Pulse off to on/slow to fast	111-159
6	Macros	No function	0-9
		Color fade	10-50
		Color fade RGB only	51-91
		Color fade chase	92-132
		Color snap chase	133-173
		Macros	174-214
7	Dimmer	Dimmer	0-255

DMX profile Mode D ( 72Channels)

DMX channel	Function	Description	Value
1	LED color	Red	0-255
2	LED color	Green	0-255
3	LED color	Blue	0-255
4	LED color	White	0-255
	...	...	...
72	LED color	White	0-255

# LEDHEAD-BATTEN2


Part No: MTC-Batten2




## Operation Instruction

- To adjust the personal setting of the BATTEN2 use keys located on the control panel. Functions see menu on the following page.
- To enter the menu press "Menu" key one time. Use keys **▲ Up** and **▼ Down** to move within the menu. Use key **Enter** to select the function and to recall the next menu section. To escape press key "Menu".

### Menu navigation

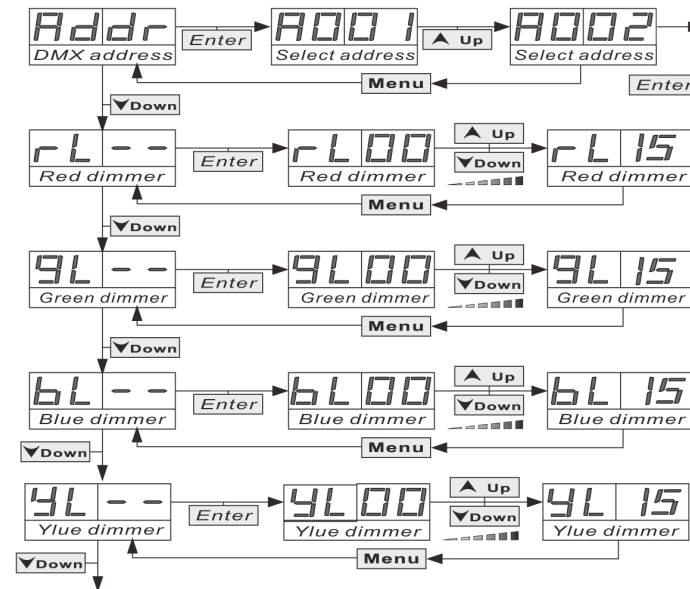

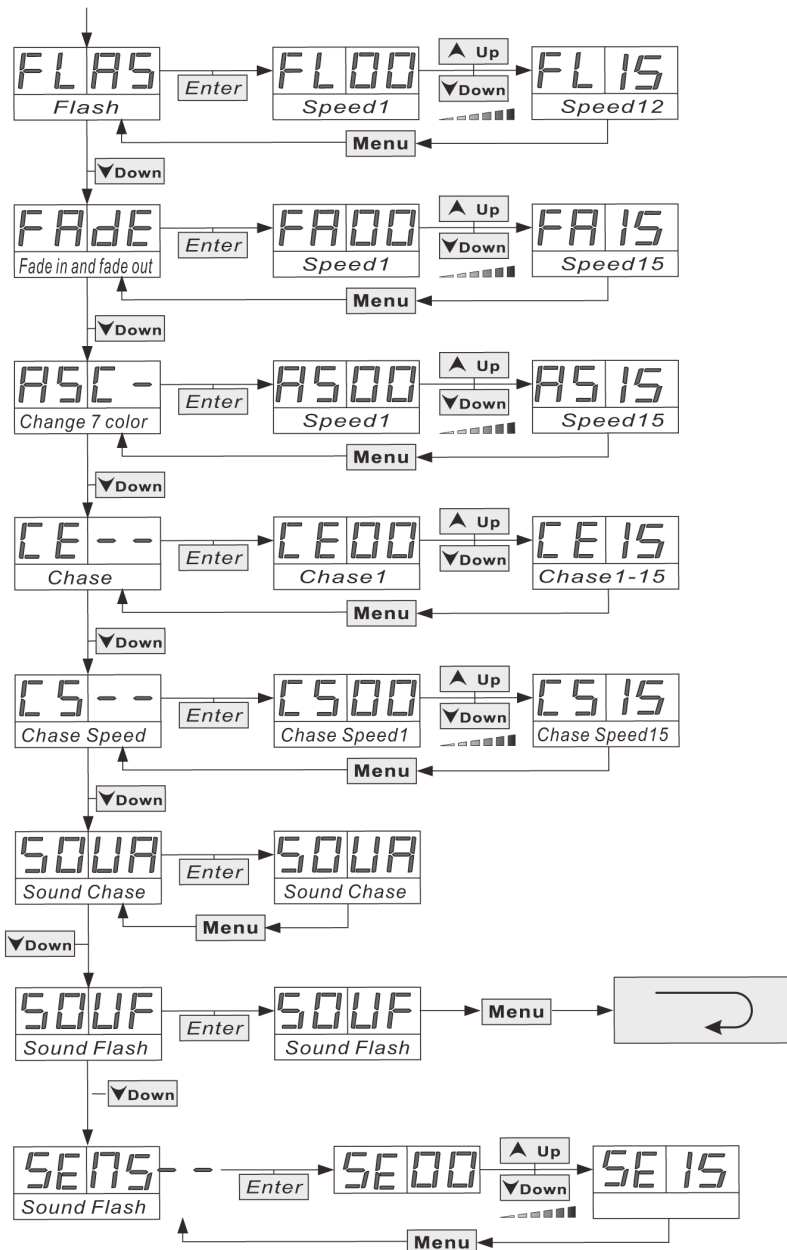

#### 4. Function:

##### Manual mode

1	FL15	Red dimmer
2	GL15	Green dimmer
3	BL15	Blue dimmer
4	YL15	Ylue dimmer

##### Auto mode

1	FL15	Flash
2	FA15	Automatic fade in and fade out
3	AS15	Auto change 7 color
4	CE15	Chase lights
5	CS15	Chase lights speed

##### Sound control mode

1	S00A	Sound Chase lights
2	S00F	Sound 7 color flash
3	SE15	Se00-se15

##### Synchronization mode(master and slave)

1	Master light	Choose same as (manual ,auto, sound control) mode way
2	All slave lights	ADD 1

##### DMX 512 mode

###### DMX Addressing:

Enter DMX address by means of the keys "▲ Up" and "▼Down".  
Confirm a store by pressing key "Enter".